

March 2021

XMP-300-CAM1 and XMP-300-CAM2

XMP-300 series Camera System Installation Manual

System includes:

- **CAM-Set** Camera with mounting hardware
- **9" Tablet** with the XMP-300-CAM1 and **10" Tablet** with the XMP-300-CAM2
- **T-STN** Tablet Mounting Stand
- **Installation manual**

Camera Requirements:

Tablet with Windows 8 or 10
or Laptop with Windows 8 or 10




CAM-SET (Camera and Camera mounting Hardware)




View of the small SMD elements on a PCB on the 9" Tablet



- 1) Unpack the box and unwind the camera cable.
- 2) Install the camera system with the holder on the post on the machine's arm (remove the previous lighting system from the arm if it is mounted on the machine's arm) and tighten it with the clamping screw

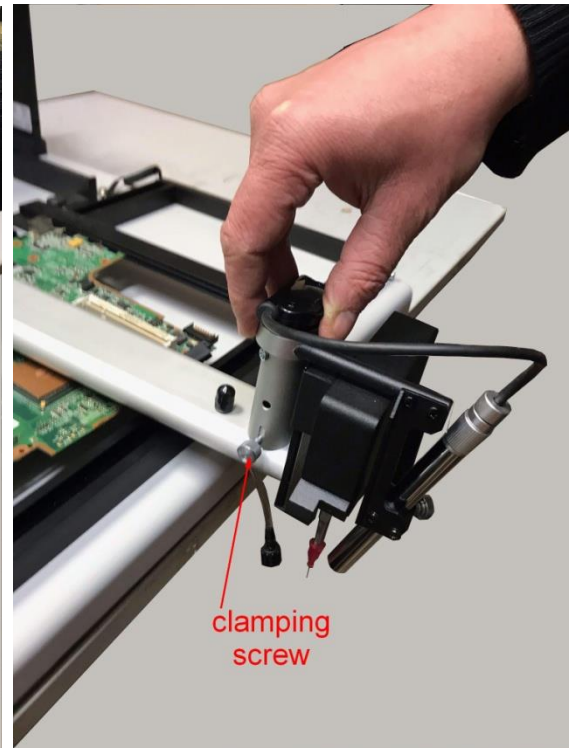

- 3) Turn the machine XMP-300 series arm over and attach the cable to the bottom of the XMP-300 arm (the arm Part numbers are: XZ-A301 or XZ-A302).

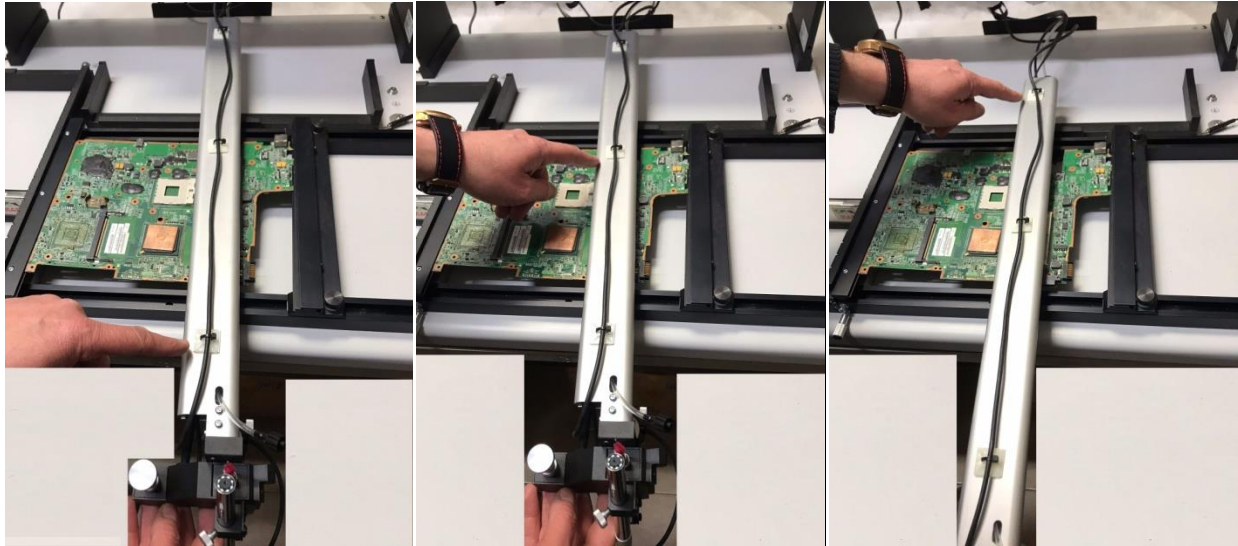

- 4) Then install the arm on the XMP-300 series and connect the cables. Connect the camera cable to a tablet or laptop with Windows 10. Launch the Camera app.



5) Knob to adjust desired height of the camera above a PCB

6) Knob for adjusting the sharpness of the picture



7) Light intensity adjustment knob (see picture below)

